

ANGELS

Design: Tine Mouritsen


The Love & Light Project was founded in November 2012 by **Isa Dawn Whyte Jensen**. She wanted to emphasize how the love for good design can be utilized by extending a helping hand to those in need of the basics in life with only pleasure and no pressure to the giver.

These designs are contributors to **The Love & Light Project** where a percentage of the profits goes to charity.

I 2012 indledte Creative Manager hos LE KLINT **Isa Dawn Whyte Jensen** Projekt Love & Light, som hvert år støtter en ny velgørenhedssag. Overskuddet fra produktserien SEASONAL Collection går til projektet.

Disse design indgår i vores **The Love & Light Project**, hvor en del af indtægterne doneres til velgørende formål.

The
Love & Light
Project 

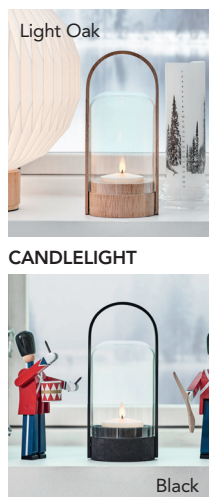

LE KLINT

Made in Odense, Denmark since 1943
Egestubben 13-17 · 5270 Odense N
leklint@leklint.dk · www.leklint.com

LE KLINT

Instruktion
Instructions Manual

Instruktioner for ANGELS

INDHOLD

Foldet engel
El-ophæng i akryl med træhoved
Lyskilde
El-stik

VEDLIGEHOOLD

Skærmen og træhovedet holdes ren ved aftørring med blød klud eller støvbørste, f.eks. **LE KLINT'S DUST BUSTER**

LYS

Anbefalet max. wattage:
Model 81350/81360 (XS): LED pære max. 3 W, G9 fatning
Model 81351/81361 (S): LED pære max. 3 W, G9 fatning
Model 81354/81364 (XL): LED-/Sparepære max. 7 W, E14 fatning, kertepære

NB: Ved for højt wattforbrug kan det give varmeproblemer i lampen og skærmen ødelægges. Det er vigtigt at sørge for at lyskilden ikke kommer i direkte berøring med skærmen.

UDPAKNING & MONTAGE

1. Udpak el-ophæng og lyskilde.
2. Fjern forsigtigt beskyttelsespapiret og pak skærmen ud.
3. Træk el-ophænget igennem englen, så skærmen hviler på selve akryl-ophænget.
4. Montér den medfølgende lyskilde i fatningen.
5. Lyskilden er monteret korrekt når der høres et lille klik.
6. Træk forsigtigt træhovedet gennem skærmens åbning i toppen.
7. Brug begge hænder for at sikre dig, at akrylophænget sidder korrekt inde i skærmens vinger.

Din ANGEL er nu klar til at tilslutte et el-udtag eller til en stikkontakt ved brug af det medfølgende stik.

NB: XL Uriel modeller leveres med to akryl afstivere som støtter kjolen.

ANGELS Instructions

CONTENTS

Folded angel
Electric hang-up with built-in acrylic frame and wooden head
Light source
A plug

MAINTENANCE

The shade and wooden head can be cleaned with **LE KLINT'S DUST BUSTER** or by wiping with a soft damp cloth.

LIGHT

Recommended max. wattage:
Model 81350/81360 (XS): LED light bulb max. 3 W, G9 socket
Model 81351/81361 (S): LED light bulb max. 3 W, G9 socket
Model 81354/81364 (XL): LED light bulb max. 7 W, E14 socket

NB: Excessive wattage can create heat inside the lamp and damage the shade. It is important to make sure that the light source does not touch the shade

UNPACKING & ASSEMBLING

1. Lift out and unpack the electrical hang-up and light bulb.
2. Carefully lift out and remove all protective packaging from the ANGEL shade.
3. Push the electrical cable all the way through the wide opening of the ANGEL.
4. Fit the light bulb.
5. The light bulb is fully fitted inside the socket when it clicks into place.
6. Pull the wooden head and neck all the way out of the top of the shade.
7. Use both hands to make sure that the acrylic frame is leveled inside the top of the wings of the shade.

Your ANGEL is now ready to connect to an electrical outlet or a plug.

NB: XL Uriel models comes with two acrylic dress-supports.

